

KAB-NCCG.x.I-TypB2

**Splitkabel Typ B2 für NCCG-xxx.I Kamera-
serie zur direkten Ansteuerung von
max. 2 LED Beleuchtungen /**



***Split cable type B2 compatible with NCCG-xxx.I
camera series for direct control of max. 2 LED lights***


Technische Beschreibung / Specification

Beschreibung / Description	<p>Splitkabel (Anschlussvariante Typ B2) M12/12-pol Buchse auf 1x M8/3-pol Stecker (Stromversorgung von Kameras und I/Os sowie Hardware Triggerung über einen Input) und 2x M8/3-pol Buchsen zum Anschluss von 2 Beleuch- tungen. Die I/O Spannung wird über die Kamera direct zur Beleuchtung durchgeschaltet.</p> <p><i>Split cable (connection variant type B2) M12/12-pin female connector to 1x M8/3-pin male connector (to power the camera and I/Os, enable hardware trigger via input) and 2x M8/3-pin female connectors for 2 illuminations. The I/O voltage is directly distributed to the illuminations.</i></p>
Kompatibilität / Compatibility	NCCG-xxx.I Kamera-Serie / Camera series
Polzahl / Number of poles	12
Anschlüsse / Connectors	1x M12/12-pol/pin Buchse / female connector 1x M8/3-pol/pin Stecker / male connector 2x M8/3-pol/pin Buchse / female connector
Leiterquerschnitt / Conductor cross section	12x 0.14 mm ² 3x 0.25 mm ²
Material / Material	TPU PUR, halogenfrei / halogen-free
Kabellänge / Cable length	100 cm (gesamt / overall) (M12 Kabel/cable 80 cm, M8 Kabel/cable 20 cm)
Befestigung / Mounting	Bohrlochabstand des Verteilers 49 mm / Hole spacing 49 mm
Einsatz in Schleppkette / Use in cable carriers	Ja / Yes
Min. Biegeradius statisch / Bending radius static	85 mm (M12 Kabel/cable) 44 mm (M8 Kabel/cable)
Min. Biegeradius bewegt / Bending radius moved installation	42,5 mm (M12 Kabel/cable) 22 mm (M8 Kabel/cable)

KAB-NCCG.x.I-TypB2

Biegezyklen / Bending cycles	M12 Kabel/cable: 2.000.000 M8 Kabel/cable: 10.000.000
Betriebstemperatur (bewegt) / Operating temperature (moved installation)	-5...+75 °C
Betriebstemperatur / Operating temperature	-25...+75 °C
Schutzklasse / Protection class	IP65 / IP67 (verschraubt / mounted)

Technische Zeichnung / Technical drawing

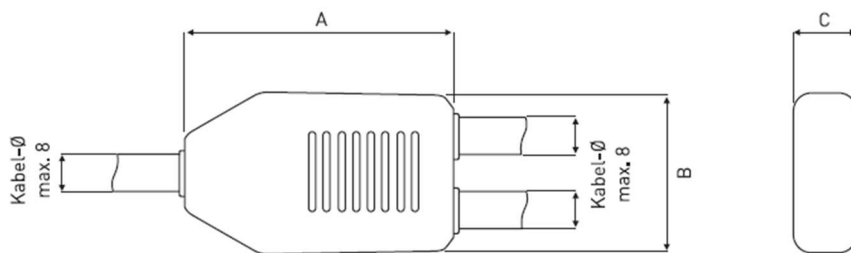

[Maße in mm]

Y-Verteiler 1:2 41-038YR2-xxxx-x *	Abmessungen		
	mm		
	A	B	C
	50,0	26,0	13,0

KAB-NCCG.x.I-TypB2

Elektrische Verdrahtung / Electrical wiring

